



Snap Suction Hook

Feature ▶ Hanlix Snap Suction Hook can be used on a wide variety of common household slick non-porous surfaces. Holds more weight for longer periods of time than any other suction cup on the market. Can be removed and reapplied by simply rinsing with warm water.



No Tools



No Drilling



No Holes in the wall



Safety Catch



Power Suction



HANLIX INT'L CO., LTD.

Tel : +886-4-7580819

E-mail: service@hanlix.com

Fax: +886-4-7580820

<http://www.hanlix.com>

NO. 851, Hexian RD., Xianxi Township, Changhua County 507, Taiwan(R.O.C)



Material ▶

Suction Disc: NBR
 Cap: ABS plastic
 Catch / Hook:
 Stainless Steel 304
 Bead End Design



Option:



Snap Suction Hook (L)

Item No. ▶ 9440080

Weight ▶ 61 g

Dimension ▶ Suction Cap Dia.: 65mm
 Width: 65mm
 Hook Height: 32 mm
 Opening Size: 42 mm
 Overall Length: 100 mm



Working Load Limit

Snap Suction Hook (M)

Item No. ▶ 9430068

Weight ▶ 32 g

Dimension ▶ Suction Cap Dia.: 56mm
 Width: 56mm
 Hook Height: 22 mm
 Opening Size: 27 mm
 Overall Length: 92 mm



Working Load Limit

Snap Suction Hook (S)

Item No. ▶ 9430051

Weight ▶ 28 g

Dimension ▶ Suction Cap Dia.: 51mm
 Width: 51mm
 Hook Height: 23.4 mm
 Opening Size: 22 mm
 Overall Length: 86 mm



Working Load Limit

Material ▶

Suction Disc: PVC
 Cap: ABS plastic
 Catch / Hook:
 Stainless Steel 304



Snap Suction Hook (L)

Item No. ▶ 9440070

Weight ▶ 39 g

Dimension ▶ Suction Cap Dia.: 63 mm
 Width: 63 mm
 Hook Height: 27 mm
 Opening Size: 42 mm
 Overall Length: 98 mm



Working Load Limit

Snap Suction Hook (M)

Item No. ▶ 9430060

Weight ▶ 23 g

Dimension ▶ Suction Cap Dia.: 54 mm
 Width: 54 mm
 Hook Height: 19 mm
 Opening Size: 27 mm
 Overall Length: 88 mm



Working Load Limit

Snap Suction Hook (S)

Item No. ▶ 9430053

Weight ▶ 15 g

Dimension ▶ Suction Cap Dia.: 47 mm
 Width: 47 mm
 Hook Height: 21 mm
 Opening Size: 23 mm
 Overall Length: 79 mm



Working Load Limit



Snap Suction Hook (Eye)

Item No. ▶ 943#068

Weight ▶ 36 g

Material ▶ Suction Disc: NBR
 Cap: ABS plastic
 Catch / Hook: Stainless Steel 304

Dimension ▶ Suction Cap Dia.: 56 mm
 Width: 56 mm
 Hook Height: 22 mm
 Hole Size: 9 mm
 Overall Length: 92 mm



Working Load Limit

Snap Suction Hook

Item No. ▶ 943X068

Weight ▶ 35 g

Material ▶ Suction Disc: NBR
 Cap: ABS plastic
 Catch / Hook: Stainless Steel 304

Dimension ▶ Suction Cap Dia.: 56mm
 Width: 56mm
 Hook Height: 27mm
 Opening Size: 6 mm
 Overall Length: 96 mm



Working Load Limit

Snap Suction Hook (Ball)

Item No. ▶ 9410095

Weight ▶ 65 g

Material ▶ Suction Disc: NBR
 Cap / Hook: ABS plastic
 Catch: Stainless Steel 304

Dimension ▶ Suction Cap Dia.: 65 mm
 Overall Height: 98 mm
 Width: 65 mm
 Depth: 55 mm



Working Load Limit

Bathroom Organization



Snap Suction Groove Hook

Item No. ▶ 941X095

Weight ▶ 86 g

Material ▶ Suction Disc: NBR

Cap: ABS plastic

Catch: Stainless Steel 304

Dimension ▶ Suction Cap Dia.: 65mm

Overall Height: 96mm

Width: 120mm

Depth: 40mm



Working Load Limit



Bottle Rack & Soap Holder

Item No. ▶ 941X095 (hook)
9460200 (basket: SUS 304)

Weight ▶ Basket: 650 g

Size ▶ Basket: H172 x W200 x D145 mm



Working Load Limit



Twin Bottle Rack & Soap Holder

Item No. ▶ 941X095 (hook x2)
9460400 (basket: SUS 304)

Weight ▶ Basket: 1062 g

Size ▶ Basket: H215 x W400 x D163 mm



Working Load Limit



Snap Suction Mini Pegboard (Ø 4.5mm)

Item No. ▶ 9445072

Weight ▶ 76 g

Material ▶ Suction Disc: NBR

Cap / Pegboard: ABS plastic

Catch: Stainless Steel 304

Dimension ▶ Suction Cap Dia.: 65 mm

Overall Height: 139 mm

Width: 73 mm

Depth: 40 mm



Working Load Limit



Snap Suction Mini Pegboard (Ø 6.4mm)

Item No. ▶ 9464072

Weight ▶ 76 g

Material ▶ Suction Disc: NBR

Cap / Pegboard: ABS plastic

Catch: Stainless Steel 304

Dimension ▶ Suction Cap Dia.: 65 mm

Overall Height: 139 mm

Width: 73 mm

Depth: 40 mm



Working Load Limit

Option

Material ▶ Steel



Pegboard Hook

Item No. ▶ 2130005



Pegboard Hook

Item No. ▶ 2137006




Pegboard Hook

Item No. ▶ 2137007



Pegboard Hook (Ø 4.5mm)

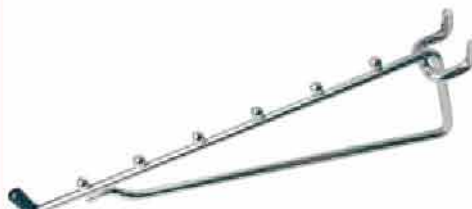

Pegboard Hook (Ø 6.4mm)



Heavy Duty Suction Hook

Item No. ▶ 9463080

Weight ▶ 121 g

Material ▶ Suction Disc: NBR

Cap: Aluminum, finish: painted

Hook: Steel, finish: plated

Dimension ▶ Suction Cap Dia.: 80 mm

Overall Height: 85 mm

Width: 80 mm

Depth: 35 mm



Item No. ▶ 9430080

Weight ▶ 133 g

Material ▶ Suction Disc: NBR

Cap: Aluminum, finish: painted

Hook: Steel, finish: painted

Dimension ▶ Suction Cap Dia.: 80 mm

Width: 80 mm

Hook Height: 70 mm

Opening Size: 23 mm

Overall Length: 136 mm



Working Load Limit

Option

Item No. ▶ 9463081

Material ▶ Cap: Stainless Steel 304

Item No. ▶ 9463082

Material ▶ Cap: Steel, finish: painted



Working Load Limit

Option

Item No. ▶ 9430X80

Material ▶ Cap: Steel, finish: painted



Bathroom Organization



Bottle Rack & Soap Holder

Item No. ▶ 9463081(hook) + 9460200(basket: SUS304)

Weight ▶ Basket: 650 g

Size ▶ Basket: H172 x W200 x D145 mm



Working Load Limit



Twin Bottle Rack & Soap Holder

Item No. ▶ 9463081(hook x2) + 9460400(basket: SUS304)

Weight ▶ Basket: 1062 g

Size ▶ Basket: H215 x W400 x D163 mm




Working Load Limit

Installation Instruction

Snap
Suction
Hook




Clean the surface thoroughly.

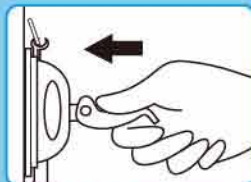

Press firmly to the surface.



Press down the lever.

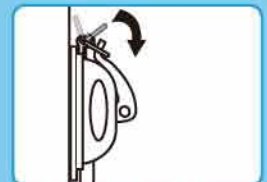

Buckle up the safety catch.

Multi-Purpose Rail

Material ▶ Suction Disc: NBR
 Cap / Hook: ABS plastic, finish: Chrome
 Catch / Tube: Stainless Steel 304



Option

Tube (100cm)

Dimension ▶ Tube dia.: 16 mm
 Length: 100cm(wall thickness: 0.4mm)



Working Load Limit



S Hook (5/8")

Item No. ▶ 9416N95
Material ▶ Stainless Steel 304



Snap suction Joint Hook

Item No. ▶ 9416C95
Weight ▶ 66 g

Multi-Purpose Rail (5/8")

Item No. ▶ 9416601

Weight ▶ 245 g

Dimension ▶ Suction Cap Dia: 65 mm
 Overall Height: 96 mm
 Width: 660 mm
 Depth: 62 mm
 Tube dia.: 16 mm
 Length: 60 cm (wall thickness: 0.4mm)



Option



S Hook (1/2")

Item No. ▶ 9413N95
Material ▶ Stainless Steel 304



J Hook (1/2")

Item No. ▶ 9413075
Material ▶ ABS plastic
 Hook: Stainless Steel 304
Dimension ▶ Opening size: 19 mm
 L75.5 x W30 x D10 mm



Working Load Limit

Multi-Purpose Rail (1/2")

Item No. ▶ 9413601

Weight ▶ 210 g

Dimension ▶ Suction Cap Dia: 65 mm
 Overall Height: 96 mm
 Width: 660 mm
 Depth: 62 mm
 Tube dia.: 13 mm
 Length: 60 cm (wall thickness: 0.4mm)



Option



S Hook (3/8")

Item No. ▶ 9410N95
Material ▶ Stainless Steel 304



J Hook (3/8")

Item No. ▶ 9410054
Material ▶ ABS plastic
 Hook: Stainless Steel 304
Dimension ▶ Opening size: 13 mm
 L54 x W24 x D8 mm



Working Load Limit

Multi-Purpose Rail (3/8")

Item No. ▶ 9410451

Weight ▶ 113 g

Dimension ▶ Suction Cap Dia: 51 mm
 Overall Height: 80 mm
 Width: 490 mm
 Depth: 52 mm
 Tube dia.: 10 mm
 Length: 45 cm (wall thickness: 0.4mm)



Option



S Hook (1/4")

Item No. ▶ 9406N95
Material ▶ Stainless Steel 304



J Hook (1/4")

Item No. ▶ 9406049
Material ▶ ABS plastic
 Hook: Stainless Steel 304
Dimension ▶ Opening size: 11 mm
 L49 x W22.5 x D8 mm



Working Load Limit

Multi-Purpose Rail (1/4")

Item No. ▶ 9406301

Weight ▶ 92 g

Dimension ▶ Suction Cap Dia: 51 mm
 Overall Height: 80 mm
 Width: 330 mm
 Depth: 52 mm
 Tube dia.: 6 mm
 Length: 30 cm (wall thickness: 0.4mm)

Snap Suction Hook series

Installation instructions

Suction hooks are commonly used, in modern times, to hang decorative or practical items from glass and other hard, smooth surfaces.

Other uses include securing bathroom accessories and kitchen utensils.

However there are a few things you can do to help the cup adhere better and longer to almost any hard surface.

- 1 Check the vacuum suction discs and the surface it is to be attached to.
- 2 Clean the surface thoroughly.
- 3 Press the rubber discs firmly to the surface. The tilting vacuum levers must be loose at this point and the whole of each rubber disc must lie on the surface.
if the hook comes with a safety catch, leave the catch ring lying flat on the surface.
- 4 Ensure that the rubber discs are completely on the tile area or other surfaces so that the discs do not cover any grouting lines or other joints. The discs should be positioned at least 1/2" away from all joints.
- 5 Press down the tilting lever. The resistance of the negative pressure generated must be clearly felt. The greater the resistance felt on the vacuum lever, the better the suction power of the snap hook. Buckle up the safety catch.
- 6 If the adhesion seems insufficient, release the hook and reattach again. If the required suction power has not been achieved, the hook should not be used. Give it a gentle tug to make sure it is holding tightly.

Suction cup can not be attached to rough or bumpy surfaces like brick and concrete wall, etc. It's difficult to stick to surfaces with pores such as wood surfaces with no coating, or wallpaper, etc.

IMPORTANT:

To ensure maximum suction for a secure lasting effect, regularly remove suction product approx 2-3 months. Clean and thoroughly dry suction cup and wall surface.

NB: Porcelain/textured tiles are porous and cannot maintain suction.



CAUTION

Suction Products rely on a well prepared clean, dry surface.

Not recommended for porous surfaces e.g. porcelain, marble tiles, textured or treated tiles.

DO NOT use Suction products to hang glass frames, mirrors or fragile items.

DO NOT use Suction products above beds or positions where failure could cause injury.

Hanlix accepts no responsibility for any loss or damage by any person as a result of the use or misuse of these goods.

In case of any defect in the goods, Hanlix liability shall be limited solely to replacement of the defective goods.